



# Installation, Operating and Servicing Instructions

## Silverlink 600 Electric Chip Scuttles CS4, CS4/G, CS6

Please make a note of your product details for  
future use:

Date Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer: \_\_\_\_\_

\_\_\_\_\_

**SILVERLINK 600**

# CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-4
Operating Instructions	5
Cleaning	5
Servicing, Maintenance and Component Replacement	5
Fault Finding	5
Spare Parts List	6
Service Information and Guarantee	7

## IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.




### **WARNING!**

This symbol is used whenever there is a risk of personal injury.



### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.

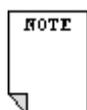

### **NOTE:**

This symbol is used to provide additional information, hints and tips.

**KEEP THIS MANUAL FOR FUTURE REFERENCE**

## WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

## TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
CS4	265 HOB 290 O/A	450	600	17
CS4/G	265 HOB 645 O/A	450	600	17
CS6	265 HOB 290 O/A	600	600	20

## CHECK LIST OF ENCLOSURES

Warranty Card
Instructions Manual
Lid knob kit (CS4, CS6)

## INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire Earth E  
Blue wire Neutral N  
Brown wire Live L

Model	Power Rating (kW)
CS4	0.5
CS4/G	1.0
CS6	0.75

This appliance is fitted with a moulded plug and lead ready to be connected to an earthed socket.

Install this appliance on a level surface ensuring all vents are unobstructed. Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances a 100mm B 500mm – see Fig 1.

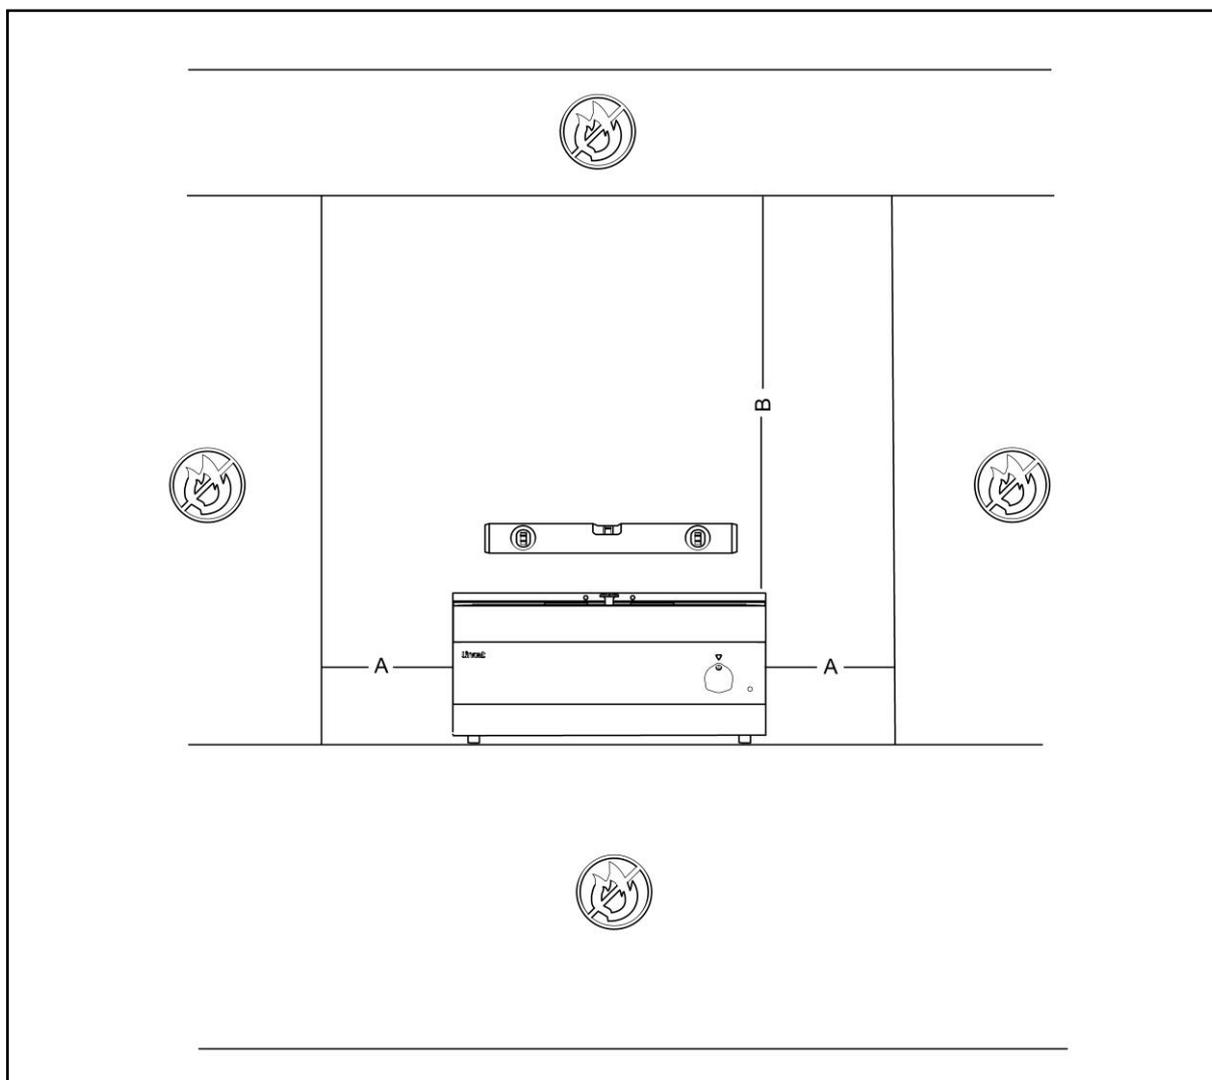


Fig 1

Fit lid knob to lid (CS4, CS6).

## OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Connect to the power supply and switch on – the green neon illuminates.

Select the desired setting on the control knob and allow the appliance to heat up.

The overhead gantry lamp on the CS4/G will operate in conjunction with the control knob.

## CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent do not use abrasive materials. Dry with a soft cloth.

## SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

### Overhead lamp replacement

Turn power off and allow appliance to cool.

The bulb holders are sprung loaded - carefully push old lamp against either end terminal until opposite end is free.

Remove lamp and reverse procedure to insert replacement. Handle the replacement lamp by the ceramic end caps and avoid touching the glass.

## FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

## SPARE PARTS LIST

Part Number	Description	Used on
EL216	Element	CS4, CS4/G
EL219	Element	CS6
EN10	Energy regulator	All
FE37	Adjustable foot	All
KN10	Lid knob	CS4, CS6
KN263	Control knob	All
LA210	Clip in lamp assembly	CS4/G
NE43	Neon	All
PL201	Plug & lead	All
TA09	Gastronorm tank	CS4/G

# SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

**☎ UK: 01522 875520**

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
  - Product code
  - Type number
  - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

## GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.